
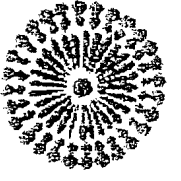
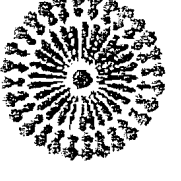
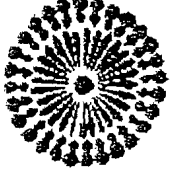
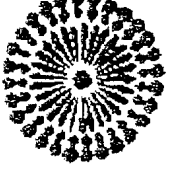
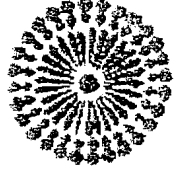
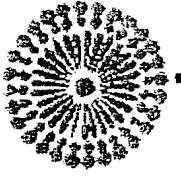
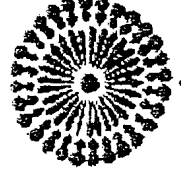
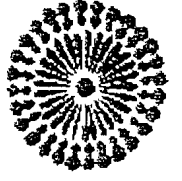
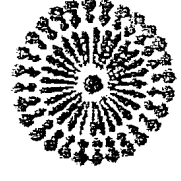
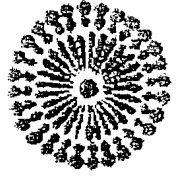
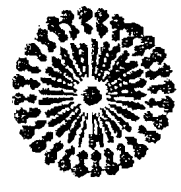


PANEL #1

PANEL #2

SEAM  
TRIM

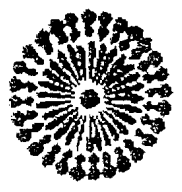

27" REPEAT


STRAIGHT  
MATCH

27"

27"

TRIM 1 1/2"  
OFF BOTH EDGES  
OF WALLPAPER

SEAM  
TRIM

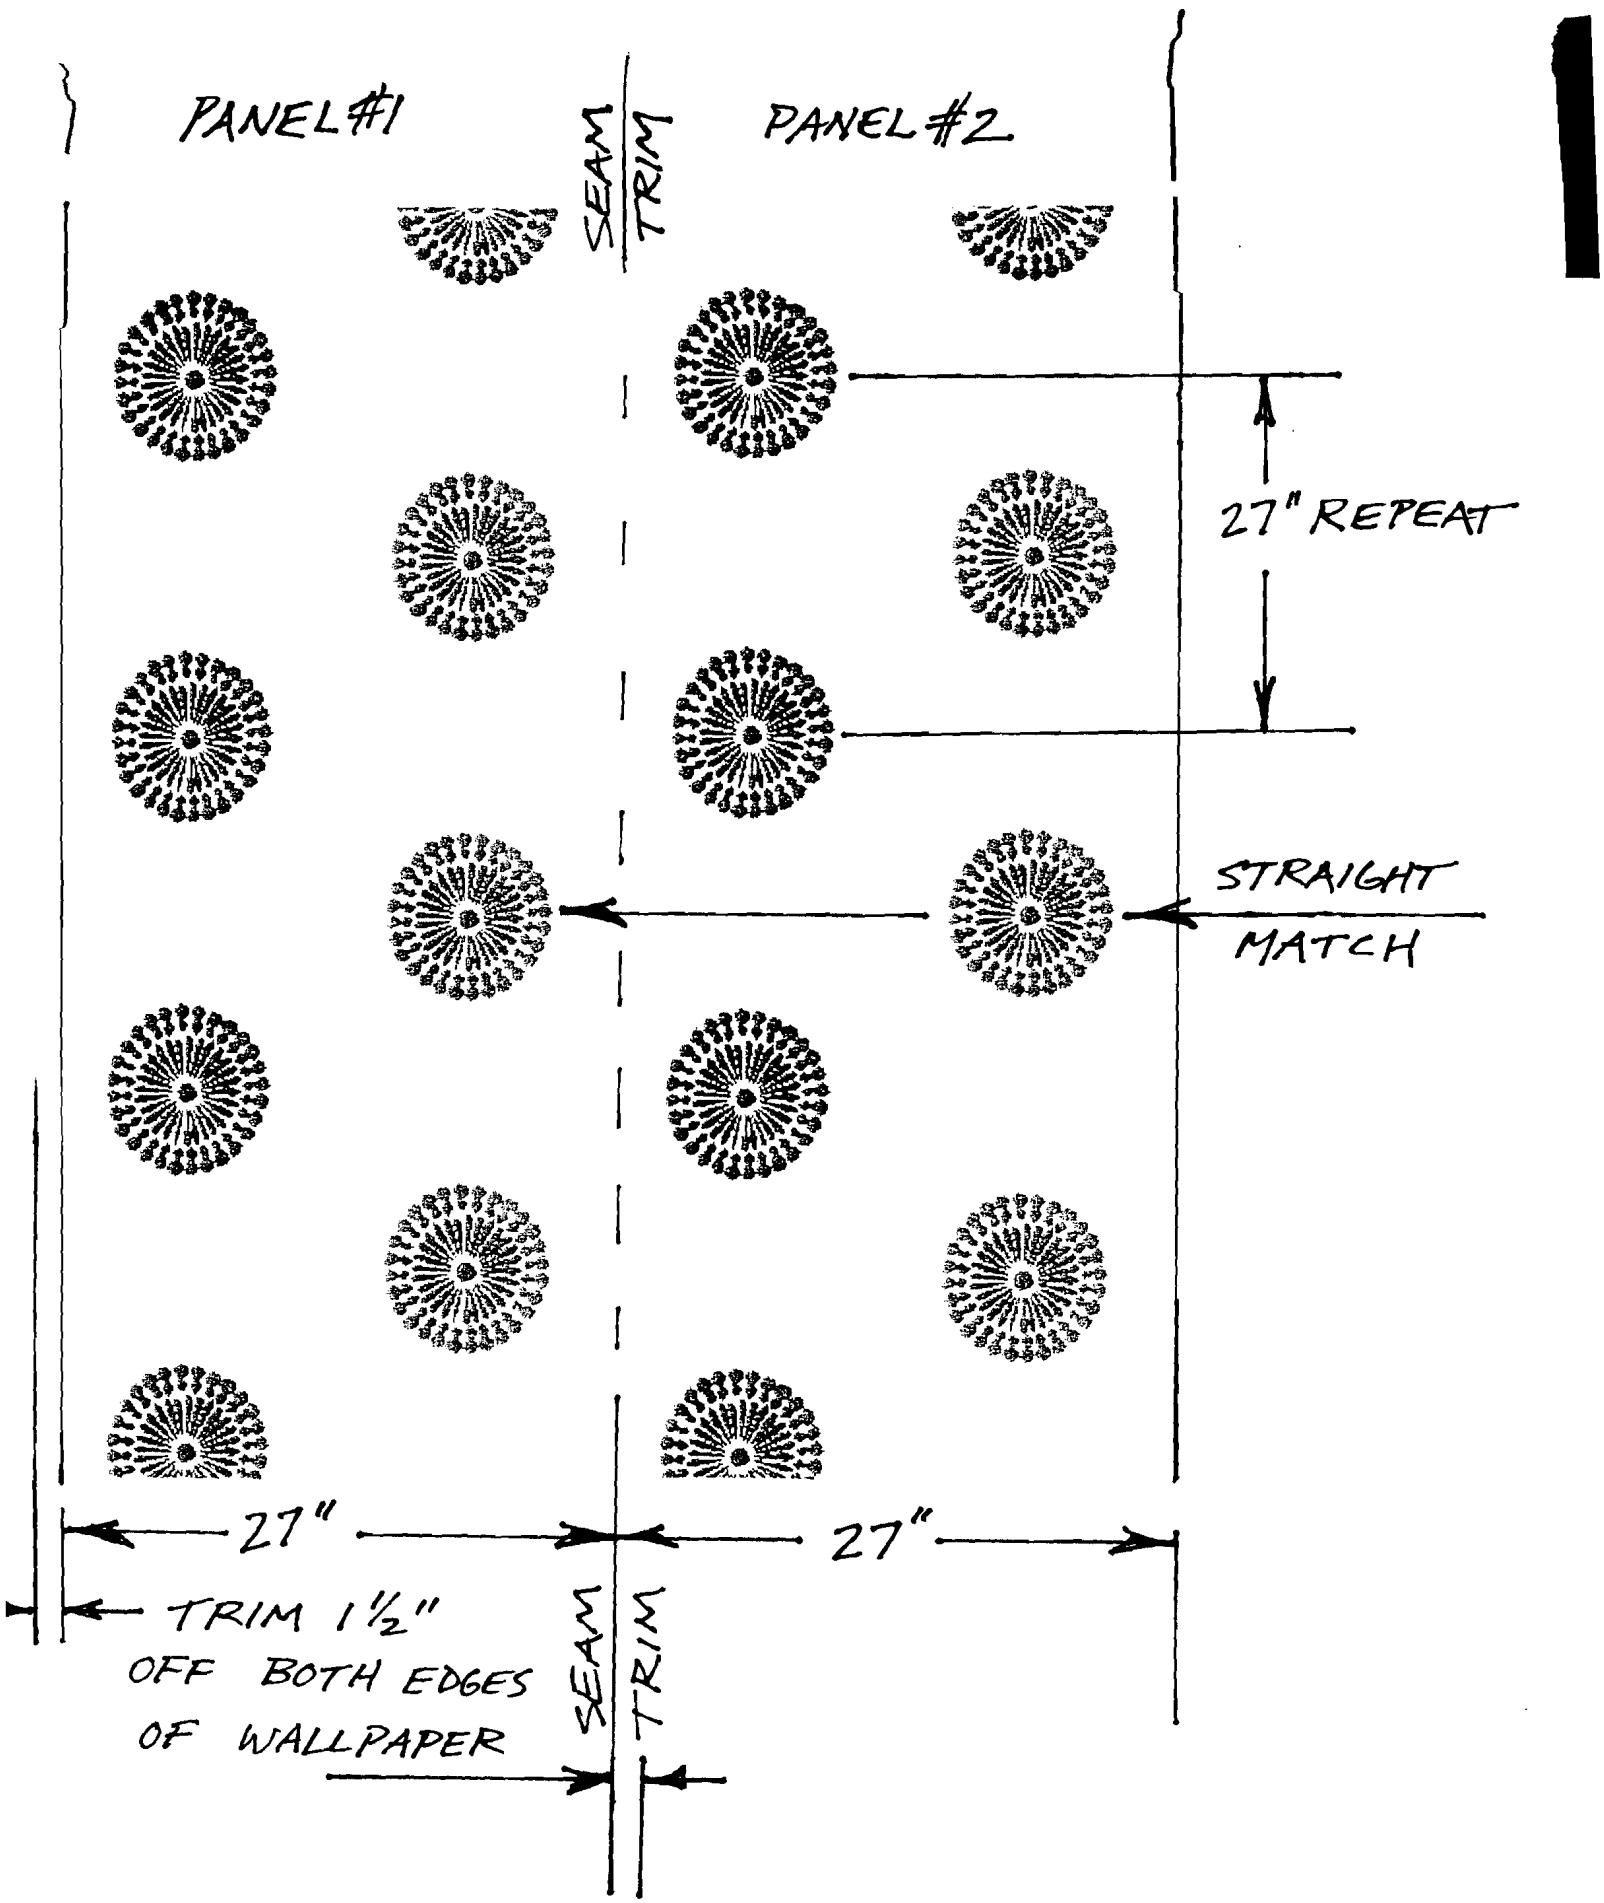

# “SOLEIL”

This wallpaper is made entirely by hand and has been designed with an inherent variation of shading and irregularity. These are not considered defects; rather, they are the beauty of a hand-made product. Note: Fingerprints on the edges of the paper are not defects, the edges of the paper will be trimmed off in the installation process.

**Please read these instructions thoroughly before beginning installation.**

This unique paper is decorated with brass or mother of pearl ornaments. Please keep the wallpaper stored in an upright position to avoid compression dents from the ornaments.

The repeat of the wallpaper is 27” with a **STRAIGHT match**. (See diagram on the other side of this sheet.) This paper will panel slightly, but that is not considered a defect. This wallcovering is not pre-trimmed. For best results, overlap the selvages and double cut directly on the wall. Approximately 1 ½ inches should be trimmed from each selvage. Trim width may vary from sheet to sheet, but the finished width of the paper should be **no more** than 27 inches after cutting. Use a heavy-duty blade to cut this wallcovering, and replace the blade often to ensure the best cut.

There is no UP direction to this paper. Handmade papers will panel slightly which is not considered a defect.

Walls must be properly primed and prepared before hanging wallpaper. Special attention should be given to removing any old paste. Use only a pre-mixed clear vinyl adhesive such as Roman Adhesive PRO-880. You may choose to paste the back of the paper, or paste the wall directly. Do not allow paste to dry on the front of the paper. This will discolor the ink over time. Remove any paste with a clean, damp (NOT **WET**) sponge and rinse again. Do not allow water to remain on the surface of the paper for a prolonged period of time. Do not overwork the seams. For best results avoid getting any paste on the front of the paper entirely.

Although the ornaments are secure, use gentle care when handling them. Pat the area around the ornaments with a smoothing brush or your hands to secure them to the wall. If you need to re-adhere an ornament to the paper, use a clear flexible adhesive such as Carpenter’s GOOP.

**The environmental lighting of your installation may create an illusion of shading due to the light reflective quality of the pearlescent and metallic inks.**

## RETURNS

Test hang 3 strips of wallpaper. If any defects are found, do not continue to install the wallpaper. Return the entire shipment to us for inspection. No adjustments will be made until we have inspected the returned wallpaper. If found by us to be defective, we will make prompt adjustments. If we determine that the goods are not defective, we will charge a 25% restocking fee.

**Be sure that what you see as a defect is not an inherent irregularity or the textured effect of this hand-made wallcovering.** We are not responsible for cut or hung material or labor charges. **No returns or will be accepted after 30 days from ship date. ABSOLUTELY NO CLAIMS OR ADJUSTMENTS AFTER MORE THAN 3 STRIPS ARE HUNG.**

**TO CLEAN:** Wipe surface gently with a damp cloth and mild detergent.  
This paper is **NOT** resistant to harsh chemicals or abrasion.